

AUTOLOG DIAGNOSTIC LED'S & INDICATORS

This sheet shows the path of signals through the system. To use the indicators the vehicle must be stopped and patterns deselected by pressing CLEAR (0) on the LHK.

